

MOHU® WARRANTY

Mohu® warrants to the original purchaser of this product that for a period of one (1) year from the date of purchase the product shall be free of defects in materials or workmanship, and will repair or replace, at its sole option, any defective product at no charge. In the event Mohu chooses to replace the product, such replacement product may be a different model than the one originally purchased.

This warranty shall not cover any damage arising from improper use of the product, including without limitation damage due to acts of nature (including without limitation weather-induced power surges and the like), use of the product in non-residential settings, accident, misuse or improper electrical/signal connections, improper installation, tampering, negligence, or product abuse. This warranty is valid only in the USA and Canada. There are no implied warranties of merchantability or fitness for a particular purpose unless otherwise required by law, and any such implied warranties are limited to the one (1) year term of this warranty.

GARANTÍA DE MOHU®

Mohu® garantiza al comprador original este producto por un período de un (1) año desde la fecha de compra el producto deberá estar libre de defectos en cuanto a materiales y de fabricación, y se reparará o reemplazará a discreción, cualquier producto defectuoso sin ningún costo. En caso que Mohu decida reemplazar el producto este podrá ser reemplazado por un modelo diferente al que compró originalmente.

Esta garantía no cubrirá los daños que surjan de un uso inadecuado del producto, incluidos sin estar limitados a daños ocasionados por la naturaleza (incluyendo, sobrecargas de energía inducidas por el clima y similares), el uso del producto en entornos no residenciales, accidentes, abusos o conexiones inadecuadas tanto eléctricas como de señal, instalación incorrecta, alteración, negligencia o abuso del producto. Esta garantía es válida solo en los EE.UU y Canadá. No existen garantías implícitas de comerciabilidad o conveniencia para un determinado propósito a menos de que estas sean requeridas por la ley, y cualquiera de este tipo de garantías implícitas estará limitada al término de un (1) año.


INDOOR / OUTDOOR AMPLIFIED HDTV ANTENNA




If you have any difficulties with the installation of your antenna, please contact Mohu®.

Si tiene cualquier dificultad con la instalación de su antena, por favor contacte a Mohu®.


RF SPLITTER (NOT PROVIDED) INSTALLATION




IF USING AN RF SPLITTER
(NOT PROVIDED),
CORRECT INSTALLATION IS
VERY IMPORTANT. IMPROPER
INSTALLATION MAY CAUSE
DAMAGE TO THE TV.




BOX INCLUDES

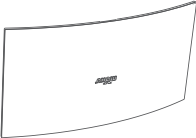


Sail™ Antenna

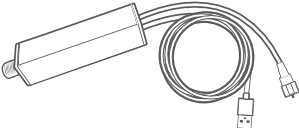

Power Injector

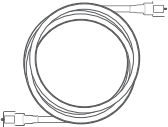


30 ft. Coaxial Cable

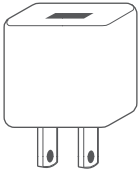

USB Power Adapter*

*Actual USB power adapter may differ in appearance.

 
Antenna Mounting Hardware

	x4 - Screws
	x4 - Washers
	x4 - Outdoor Screws
	x2 - Wingnuts
	x1 - U-Bolt
	x2 - Carriage Bolts
	x2 - Flange Nuts
	Tube Mounting Bracket
	Mounting Tube
	Two and Four Hole Antenna Mounting Brackets with Teeth

Para español, visite gomohu.com/setup

6

In the TV's setup menu, set the tuner mode to "Antenna" or "Air". Refer to the TV manual for detailed instructions.

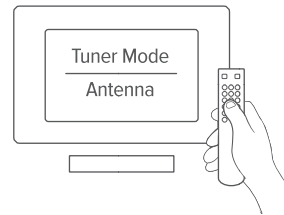

7

In the TV's setup menu, set TV to "scan" for channels. This can sometimes be listed as auto-program, auto-scan, channel search or channel scan. Refer to the TV manual for detailed instructions.



IMPORTANT!



FOLLOW ALL SAFETY PROCEDURES, WARNINGS AND INSTRUCTIONS WHEN INSTALLING YOUR ANTENNA.

SAFETY PROCEDURES


- Make sure there is another person present (on the ground) while installing the antenna.
- DO NOT attempt to mount the antenna on a windy, rainy or snowy day.



MOUNT THE ANTENNA AT LEAST 20 FT. FROM ALL POWER LINES OR UTILITY POLES.

POWER LINE WARNING


If you intend to mount the antenna on a rooftop, make sure to mount it at least 20 ft. away from any power lines or utility poles.

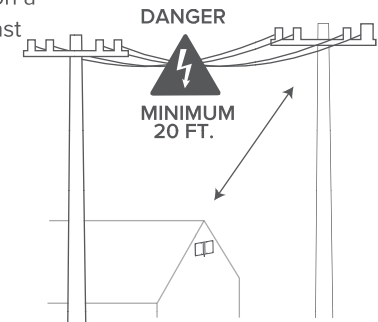


INSTRUCTIONS

1

- A** Position the mounting bracket (flat surface to wood) to create an "I" shape when viewed from straight on.
- B** Secure the mounting bracket by using the four large outdoor screws.

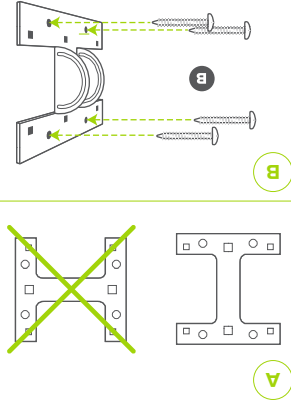

- Place the u-bolt under the bottom toothed plate, and secure the plate with the four included screws and washers to the antenna.
- Sandwich the mounting tube between the bottom and top toothed brackets and secure with the included wingnuts.
- Insert the short end of the mounting tube into the mounting bracket.
- Use the two Carriage bolts and washers to secure the mounting tube to the mounting bracket.

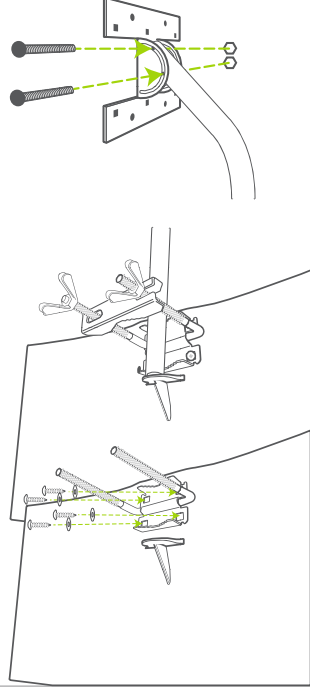

3

Attach end of the 30 ft. coaxial cable to the connector on the antenna.

Run the free end of the coaxial cable from the mounting location to the location of the TV. Connect the coaxial cable to the connector on the power injector. If needed, coaxial cable can be added with a coaxial coupler (not provided). Excessive cable may cause reception loss.

4

Connect the coaxial cable attached to the power injector to the ANT/IN connector on the back of the TV.


[NOTE: If using an RF splitter, turn to the next page and follow the RF splitter installation instructions.]



5

The power injector must be powered in order to function. Plug the amplifier's USB cable into an open USB port on the back of the TV. If the TV does not have a USB port, use the included power adapter to power the power injector via any standard 120V wall outlet.

POWER OPTIONS:

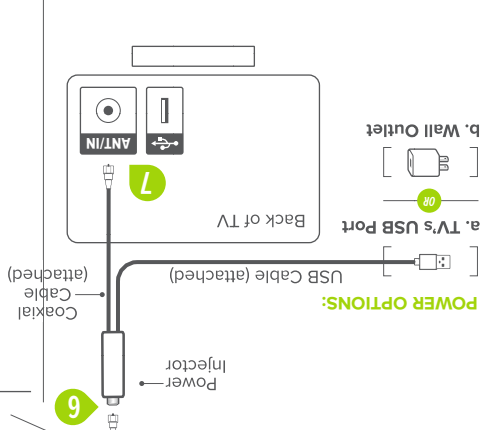

2

